



# Makita XPH01 Outer Casing Replacement

This prerequisite-only guide will show you how to replace the outer casing of the Makita XPH01.

Written By: Eric Herwatt



## INTRODUCTION

The outer casing of the drill needs to be taken out in order to replace the other parts of the drill. There are a total of nine 18 mm screws that needs to be taken out of the outer casing. This guide serves as a prerequisite guide for the other replacement guides.

---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Battery



- Hold the drill upright.
- Place your finger on the white battery-release button.

## Step 2



- Press and hold the white release button located on the front of the battery.

## Step 3



- Slide the battery forward while pressing down on the white battery-release button.

## Step 4 — Outer Casing



- Hold the drill upright with the back panel facing you.
- Unscrew the two 18 mm screws from the back panel using a Phillips PH2 screwdriver.

## Step 5



- Apply slight pressure to the sides of the backplate and pull away from the drill.

## Step 6



- Unscrew the nine 18 mm screws from the outer casing using a Phillips PH2 screwdriver.



## Step 7



- Apply slight pressure to the sides of the outer casing and pull away from the drill.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 08:57:53 AM.